


54–550 Removal and installation of sensor on mechanical tachometer

Removal

- 1 Remove instrument cluster.
- 2 Pull harness from sensor (3).
- 3 Unscrew sensor (3) from tachometer.

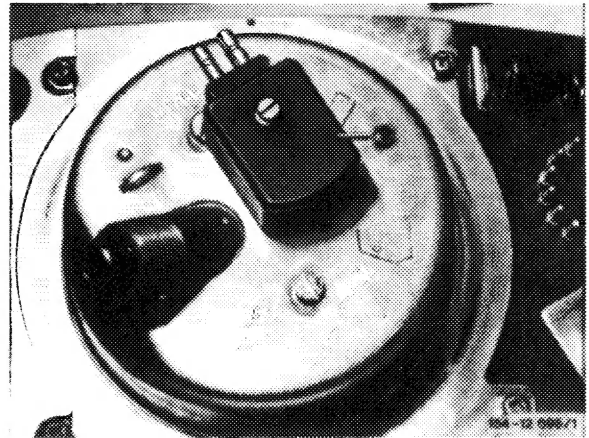

Model 123

Installation

- 4 For installation proceed vice versa.
- 5 Perform function test on road.